

Avoid operator fatigue when retracing with the CRPB-818 Rework Remote Trigger. The ergonomic design significantly reduces strain over flipping toggles when repainting inconsistent skips.

VERY "HANDY" WHEN
PRECISION
IS CRITICAL


REMOTE TRIGGER FUNCTIONS

-  The activity light will blink steadily at 1/2 second intervals when there is CAN activity.
-  The left/right switch allows you to quickly and easily toggle the remote between controlling the right side guns and the left side guns.
-  Semi-Auto allows the operator to paint one full stripe length with one pull and release of the trigger.
 -  **Note: When paired with Align Solids, Semi-Auto mode will withhold solid guns until the first trigger press.**
-  Off will disable the remote.
-  Manual allows the operator to pull and hold the trigger to achieve full control of all guns in SKIP.
-  The trigger allows for easy and comfortable operator control.



CONSOLE INSTALLATION

The CRPB-818 Remote Trigger can be plugged directly into the BUS-012 or Core Hub. If your hub is in a difficult to reach location, you can use a 13/16" drill bit or a d-punch to create a mounting hole on the side of your console to allow for easier plug and play. Simply connect your coupler to your hub with a Cat5 cable.

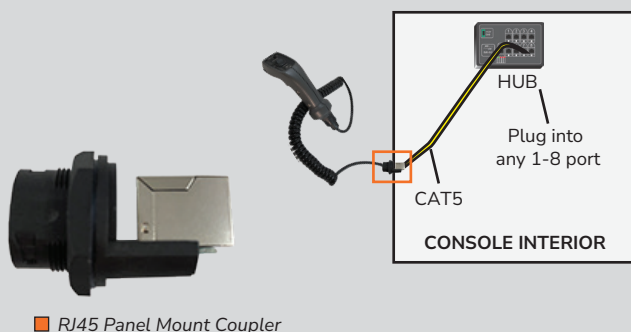

START/STOP CAPABILITIES

Alternatively, you may use the CRPB-818 as a way to start or end an entire pattern, not just individual skips. Turn the Remote Start to ON in the Quick Setup menu to control the start and stop points of the pattern just like using the Start/Stop switch.



-  **Semi:** click the trigger to start, and click again to stop.
-  **Manual:** start is on while the trigger is held.
- ☐ **Auto:** normal painting, ignores the remote trigger.